 


Washing & Drying Instructions



Wash wisely

Washing guide

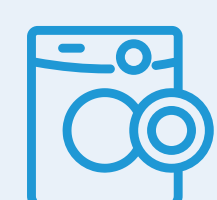

Check door seal and inside drum to make sure everything is clear



Load washer – max $\frac{3}{4}$ full



Add detergent and close door (firmly)



Select cycle



Select washer

Select washer on payment screen or press button on front of machine



Check value on reader



Tap phone/card

When you hear 'pass your credit card'



Wait for verbal confirmation



Press start


(If machine has start button)



Cycle finish

Wait 30 seconds for the door click to release

Drying guide

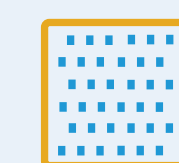


Clean lint filter

It helps clothes dry quicker



Load dryer

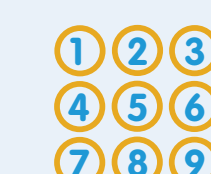

Select cycle



Select dryer

Select dryer on payment screen or press button on front of machine



If stack of 2 dryers

Select BOTTOM MACHINE (blue button) or TOP MACHINE (red button)



Check value on reader



Tap phone/card


When you hear 'pass your credit card'



Wait for verbal confirmation



Cycle finish - clean lint filter ready for next user

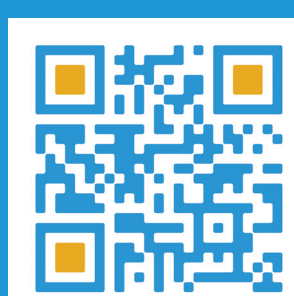

Scan here for Espanol, Francais,
Cymreig, 中文 version



...and many more

Washstation Helpline 0800 141 2331
service@washstation.co.uk

MAR064/0.1/NAYAXALLIANCE